

## Quick Start Reference Guide

- Upon receipt of the CleanStation, inspect the unit for obvious defects that may have occurred during shipping. Report any damage to the carrier and PM Technologies immediately.
- Place the machine on a solid level surface that will have access to the valve at the rear of the machine.
- As a normal industry safety practise, plug machine into a 110VAC ground fault interrupt outlet.
- Close drain valve, valve is closed when handle is perpendicular to the drain pipe.
- Fill tank to 1 inch from the top with water.
- Turn on the machine and press the down arrow key.
- Put 1/2 of a bottle of WaterWorks Soluble Concentrate into the water, when the machine is running and the water is cool.
- Place parts directly into the tank, or if purchased into the basket which goes into the tank.
- The default time and temp is 4 hours, 150 degrees.

